

A diagram of a control panel. It features a power button (a circle with a vertical line) on the left, a stop button (a square with a diagonal line) on the right, and a central rectangular display area. Below the display are three buttons: a minus sign (-), a button labeled 'MODE', and a plus sign (+). At the very bottom is a small oval button.

Saunasteuerung Saunacontrol

